

## FEATURES & BENEFITS

### EYE/FACE WASH

AXION<sup>®</sup> MSR eye/face wash head uses an inverted directional laminar flow to sweep contaminants away from the vulnerable nasal cavity.

### VALVE

Units swing forward to activate design produces a full continuous flow of water and provides an easy start to the irrigation process.

### MOUNTING

Unit mounts on either side of the sink allowing for a secure fit in any location.

### SAFETY

8" x 10-3/4" (20.3 x 27.3 cm) universal emergency sign make the unit easily detected in an emergency. Test card to record weekly checks helps maintain the units best working quality.

## OPTIONS

- Thermostatic Mixing Valve: Model 9201EW AXION<sup>®</sup> Emergency Tempering Valve thermostatically mixes hot and cold water to provide a safe fluid supply for a single emergency eye/face wash, with a flow rate of 10 gpm (38.8 L).
- Emergency Alarm System : Model 9001.5, 1/2" 120 VAC emergency alarm and light system. Buzzer and flashing light are activated by a 1/2" IPS double pole, double throw flow switch.
- Thermostatic Mixing Valve: Model 9201EFE AXION<sup>®</sup> Emergency Tempering Valve thermostatically mixes hot and cold water to provide a safe fluid supply for a single emergency eye/face wash, with a flow rate of 12 gpm (38.8 L).
- Valve Repair Kit: Model VRK7650 valve repair kit.

For more information, visit [www.hawsco.com](http://www.hawsco.com) or call (888) 640-4297.




## SPECIFICATIONS

Model 7611 counter top mounted eye/face wash shall include an AXION<sup>®</sup> MSR eye/face wash head shall feature inverted directional laminar flow which achieves Zero Vertical Velocity™ supplied by an integral 3.7 gpm flow control, polished chrome-plated brass single action swing-out valve body, universal sign, and 1/2" O.D. (1.3 cm) slip joint inlet.

## APPLICATIONS



Where safety is of the utmost importance and the eyes of any person may be exposed to injurious or corrosive materials, suitable facilities for quick flushing and cleansing of the eyes be provided within the work area for immediate emergency use. When installed properly, the stable construction, counter top design of the 7611 is space efficient and durable. Model is certified by CSA to meet the ANSI Z358.1 Standard for Emergency Eyewash and Shower Equipment.



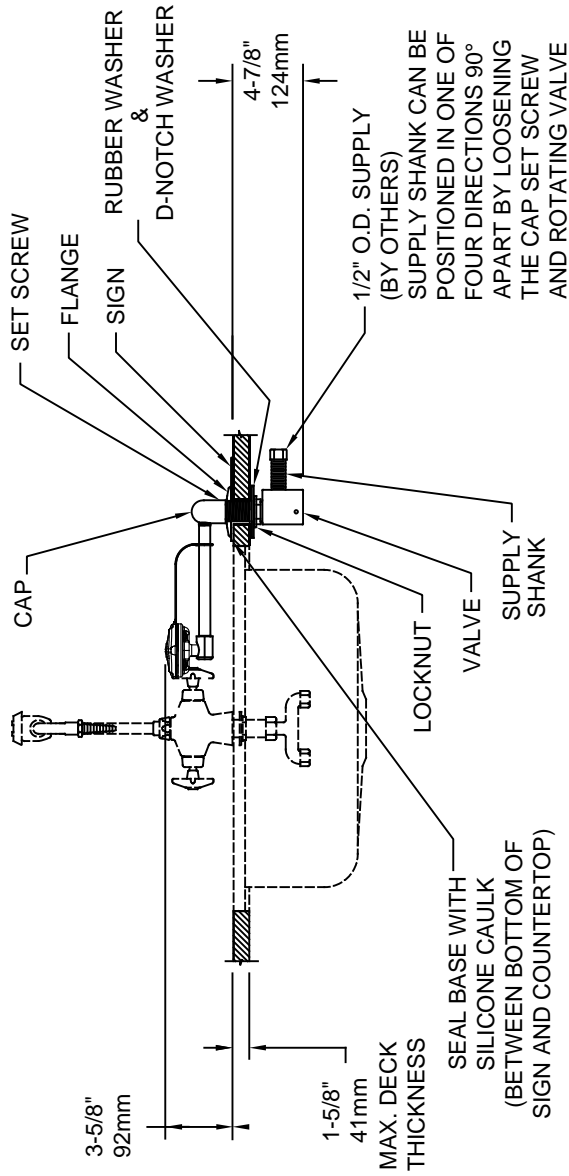


**NOTES:**


1. THE ANSI Z358.1-2009 STANDARD SPECIFIES EYEWASH NOZZLE HEIGHTS TO BE 83.8cm (33 IN.) TO 114.3cm (45 IN.) ABOVE THE FLOOR AND 15.2cm (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
2. INSTALL SO THAT EYEWASH HEAD IS OVER SINK WHEN ACTIVATED.
3. DRILL ONE Ø1-3/8" [35mm] HOLE WHERE UNIT IS TO BE INSTALLED.
4. THESE DIMENSIONS MAY VARY ±1/2" [6.4mm].

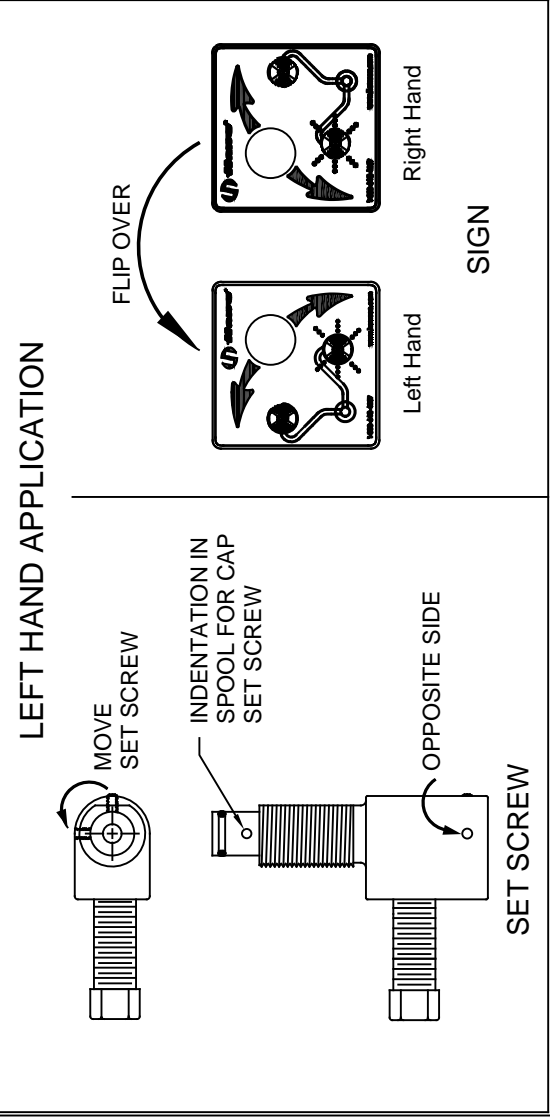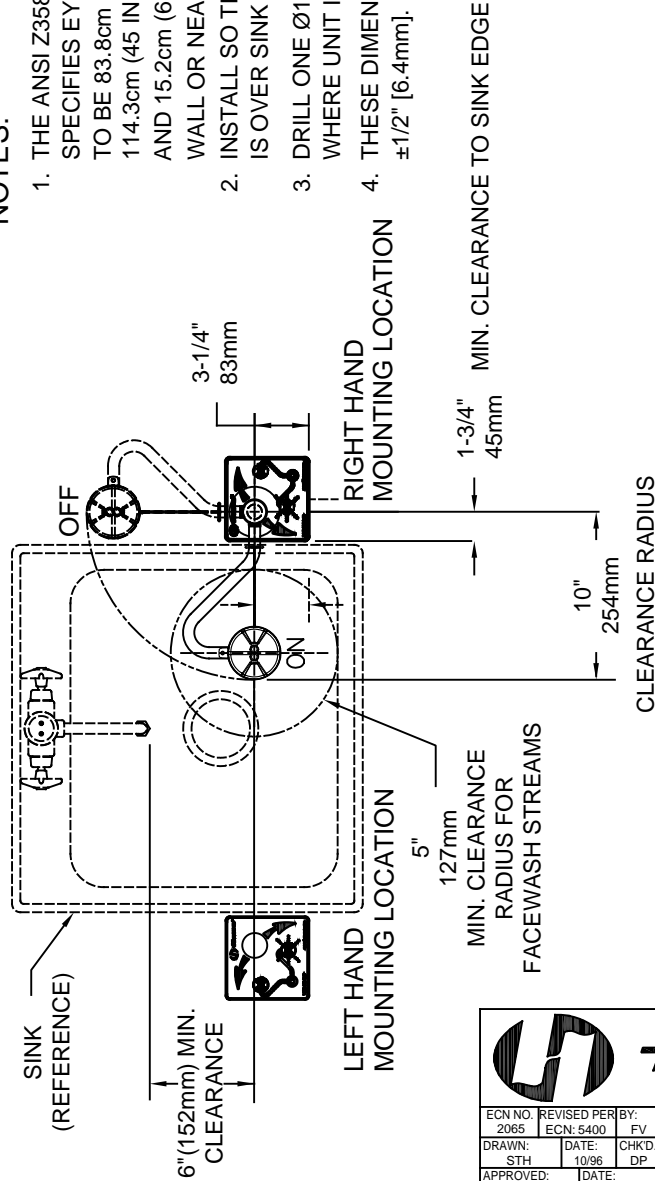

1455 KLEPPE LANE  
SPARKS, NEVADA 89431  
(775) 359-4712 FAX (775) 359-7424  
E-MAIL: HAWS@HAWS.CO.COM  
WEBSITE: WWW.HAWS.CO.COM

ECN NO. 2065	REVISED PER ECN: 5400	BY: FV	MODEL(S)	7611	PART NUMBER	0002080063.D
DRAWN: STH	DATE: 10/96	CHKD: DP			REVISION	11
APPROVED: IR	DATE: 05/30/19	SCALE: 8:1	DRAWING TYPE: INSTALLATION	SIZE: A	SHEET 1 OF 2	

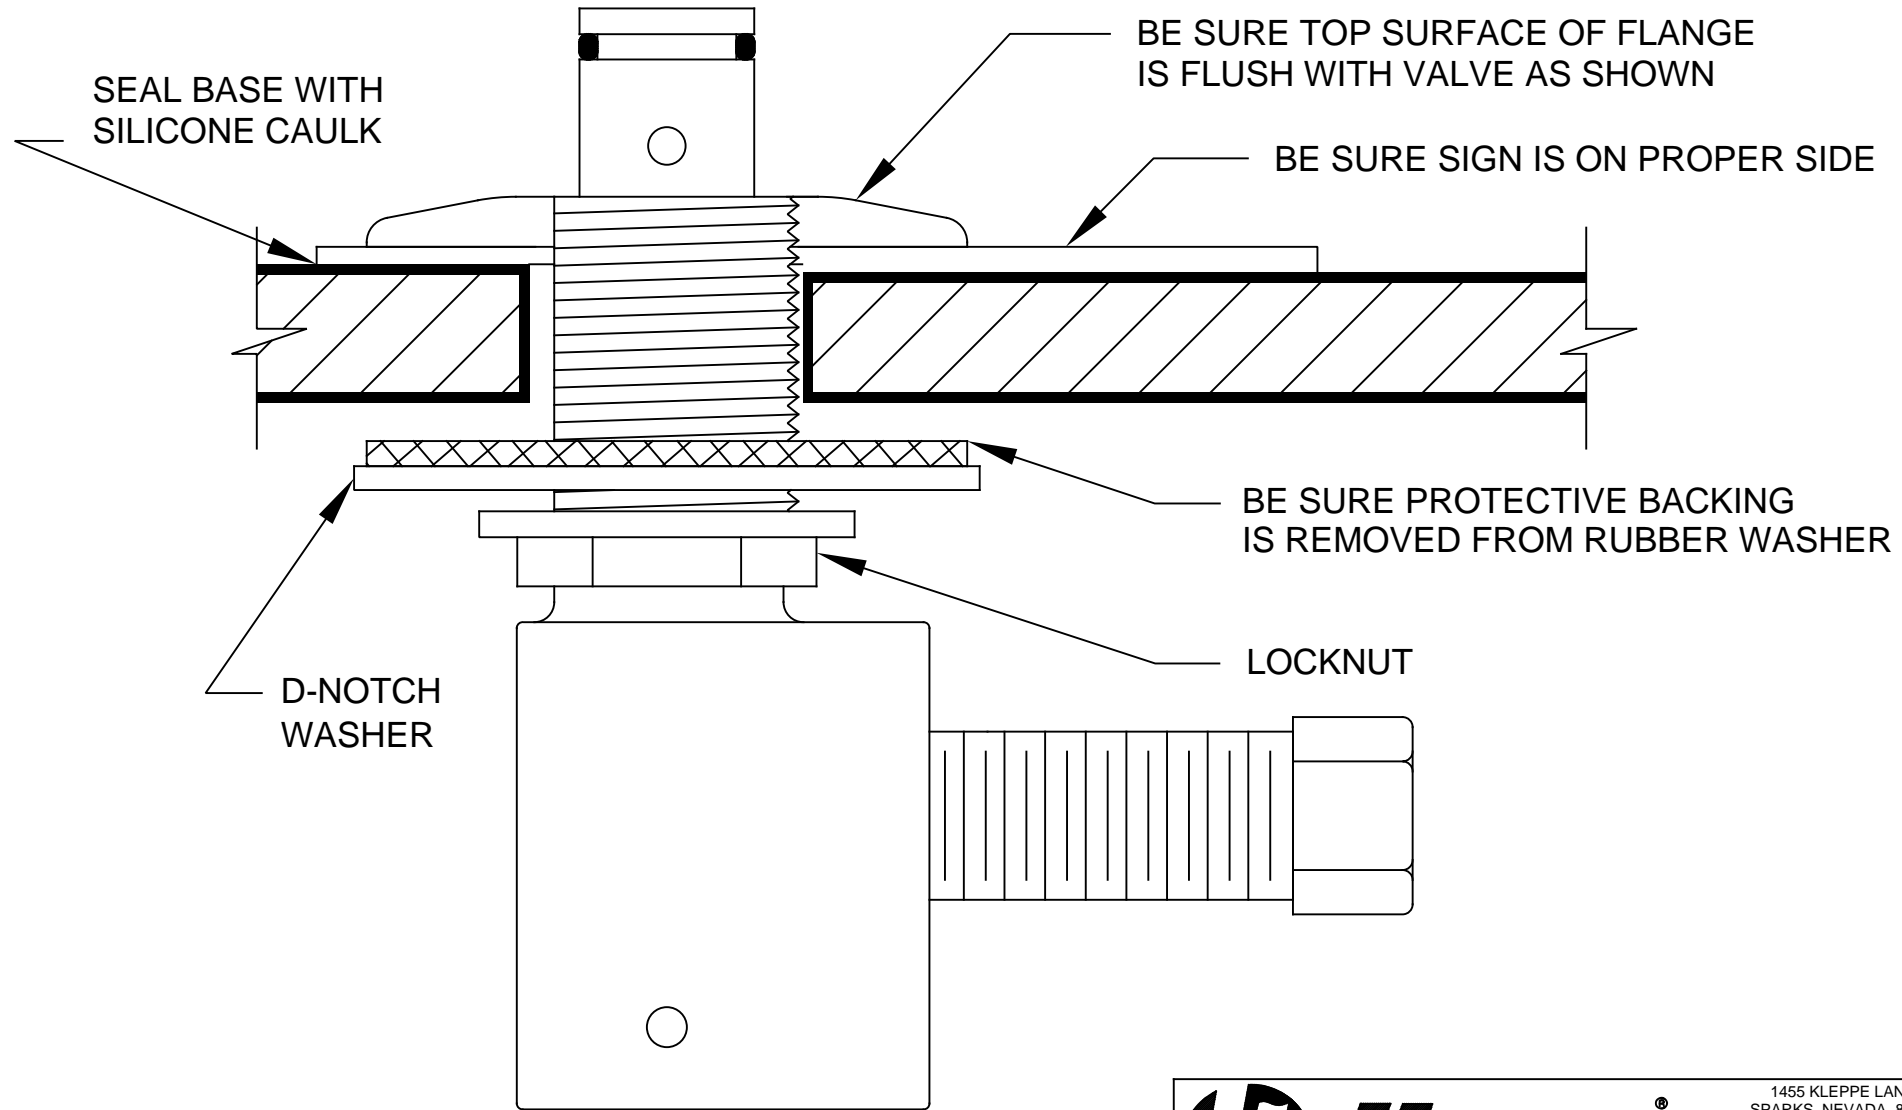


**Haws**<sup>®</sup>

1455 KLEPPE LANE  
 SPARKS, NEVADA 89431  
 (775) 359-4712 FAX (775) 359-7424  
 E-MAIL: HAWS@HAWS.CO.COM  
 WEBSITE: WWW.HAWS.CO.COM

ECN NO.:	REVISED PER:	BY:	MODEL(S)	PART NUMBER
ECN: 5400	FV		7611	0002080063.D
DRAWN:	DATE:	CHKD.:		REVISION
STH	10/96	DP		11
APPROVED:	DATE:	SCALE:	DRAWING TYPE:	SHEET
IR	05/30/19	1:1	INSTALLATION	2 OF 2